



INSTANT-LITE LANTERNS
Model Nos. 220D and 228D

Order by Number	Part Name	Net Retail Price
21A	Mantle	2 for \$.25
	Dozen	1.20
51-53	Screw03
T44G	Generator and Gas Tip Cleaning Needle (less Jamb Nut (Gas Tip Marked "V"))60
330	Pyrex Glass Globe	1.00
101-324	Burner Tube21
104-107	Lock Nut06
104-326	Mixing Chamber69
112-323	Burner Cap and Screen18
118A304	Eccentric Block09
118B136	Filler Plug Gasket03
118B138	Fuel Tip Cleaning Needle21
118B218	Gas Tip (Marked "V")09
118B619	Direction Disc09
118B620	Valve Stem Packing03
118B649	Valve Wheel18
133-618	Fuel Tip (Marked ★)09
203-441	Ventilator Ball Nut15
216-509	Pump Leather06
220B140	Filler Plug Complete69
220B322	Air Intake Tube69
220B340	Ventilator Rod15
220B353	Tip Cleaner Stem Packed42
220B357	Gas Tip Cleaner Complete Assembled99
220B950	Wrench (Small)21
220D146	Fuel and Air Wire Complete (Fuel Tip Marked ★)99
220D165	Fount Complete	6.00
220D520	Pump Plunger Complete (Less Air Stem)81
220D653	Valve Stem Complete99
220D657	Fuel Valve Complete	2.40
220B485	Ventilator	1.95
220B423S	Bail21
220B498	Frame and Bail	1.20
220D429	Base Rest27
227-480	Ventilator	2.70
228B423S	Bail21
228B498	Frame and Bail	1.20
228D429	Base Rest27
242B532	Air Stem27
242B538	Check Valve27
605-210	Jamb Nut03
605-950	Wrench (Large)21

No. 242B538 Check Valve can be unscrewed with an ordinary screw driver.