


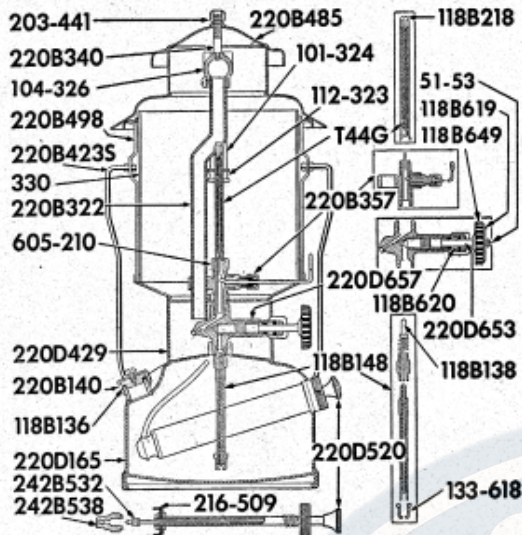

INSTANT-LITE LANTERNS
Model Nos. 220D and 228D

Order by Number	Part Name	Net Retail Price
21A	Mantle 2 for \$	.25
	Dozen	1.20
51-53	Screw	.03
T44G	Generator and Gas Tip Cleaning Needle (less Jamb Nut (Gas Tip Marked "V")).....	.60
330	Pyrex Glass Globe.....	1.00
101-324	Burner Tube	.21
104-107	Lock Nut	.06
104-326	Mixing Chamber	.69
112-323	Burner Cap and Screen.....	.18
118A304	Eccentric Block	.09
118B136	Filler Plug Gasket.....	.03
118B138	Fuel Tip Cleaning Needle.....	.21
118B218	Gas Tip (Marked "V").....	.09
118B619	Direction Disc	.09
118B620	Valve Stem Packing.....	.03
118B649	Valve Wheel	.18
133-618	Fuel Tip (Marked ★).....	.09
203-441	Ventilator Ball Nut.....	.15
216-509	Pump Leather	.06
220B140	Filler Plug Complete.....	.69
220B322	Air Intake Tube.....	.69
220B340	Ventilator Rod	.15
220B353	Tip Cleaner Stem Packed.....	.42
220B357	Gas Tip Cleaner Complete Assembled.....	.99
220B950	Wrench (Small)	.21
220D146	Fuel and Air Wire Complete (Fuel Tip Marked ★).....	.99
220D165	Fount Complete	6.00
220D520	Pump Plunger Complete (Less Air Stem).....	.81
220D653	Valve Stem Complete.....	.99
220D657	Fuel Valve Complete	2.40
220B485	Ventilator	1.95
220B423S	Ball	.21
220B498	Frame and Bail.....	1.20
220D429	Base Rest	.27
227-480	Ventilator	2.70
228B423S	Ball	.21
228B498	Frame and Bail.....	1.20
228D429	Base Rest	.27
242B532	Air Stem	.27
242B538	Check Valve	.27
605-210	Jamb Nut	.03
605-950	Wrench (Large)	.21

No. 242B538 Check Valve can be unscrewed with an ordinary screw driver.