

repair parts

CAUTIONS

REMOVE TANK AND GENERATOR ASSEMBLY FROM STOVE BEFORE FILLING. Spilled gasoline on the stove could cause a fire.

NEVER REMOVE FILLER CAP WHILE STOVE IS BURNING... OR NEAR OPEN FLAME...OR NEAR EXCESSIVE HEAT. DO NOT OVERFILL TANK. Overfilling will cause flooding of the stove and possible flaming. Always be sure tank is level when filling.

Key No.	Part No.	Description
SEE BACKPAGE FOR ORDERING INFORMATION		
1.	413C3061	Auxiliary Burner Bowl
2.	413C3461	Auxiliary Burner Cap and Fillers
3.	447-5201	Grate
4.	425-3451	Master Burner Cap and Fillers
5.	413C3021	Burner Bowl (Master)
6.	425-5281	Manifold Ass'y.
7.	412-6601	Valve and Generator Complete
8.	*412-5621	Generator
9.	412-6561	Valve with Stem
10.	412-2531	Stem Assembly
11.	220B175	Self-tapping Screw
12.	407-6491	Valve Wheel
13.	216-6201	Valve Stem Packing
14.	242D5201	Pump Plunger Assembly
15.	530A5071	Pump Cap Clip
16.	216-5091	Pump Cup
17.	200-533	Air Stem Assembly
18.	242B5381	Check Valve
19.	447B5601	Tank Complete
20.	220C1401	Filler Cap
21.	447-4051	Leg
22.	242-1071	Push-on Nut
	1960E021	Customers Instructions Manual
CATALOG ITEMS*		
8.	*72311	Generator

*The following part is available at your nearest Sears retail store or catalog sales office.

GUARANTEE

This Sears Camp Stove is guaranteed for one year from date of purchase against mechanical defect. Fouled or damaged generator not included.

SEARS, ROEBUCK AND CO.
Chicago, Illinois 60607

Model No. 476.72244

