

repair parts

NEVER TRY TO REPEAT LIGHTING PROCEDURE UNTIL INITIAL PREHEATING FLAME HAS GONE OUT. Excessive flaming and burns could result.

NEVER FILL OR REFILL TANK NEAR OPEN FLAME OR OTHER SOURCE OF HEAT. The tank can be refilled while heater is burning once the preheating flame has gone out, however care should be used.

USE EXTREME CARE WHEN HANDLING, STORING OR TRANSPORTING GASOLINE. Use only properly labeled containers. Gasoline is poisonous and extremely flammable. Its vapors are also toxic and can cause an explosion.

Key No.	Part No.	Description
SEE BACK PAGE FOR ORDERING INFORMATION		
1.	515-2501	Bail
2.	470A6291	Canopy Assembly
3.	515A6351	Snuffer
4.	515A6081	Head Assembly
5.	515-1801	Cap & Gasket
6.	515-1641	Ball Gasket
7.	513A2771	"O" Ring
8.	515-6561	Wick Assembly
9.	1201B717	Push Nut
10.	515-2801	Adjusting Arm Assembly
11.	513-6031	Crank Assembly
12.	1201C703	Pal Nut
13.	470-6601	Fount Assembly
14.	469-1401	Filler Plug
15.	513-2531	Gasket, Filler Plug
	1960D100	Customer's Instruction Manual

GUARANTEE

This Sears camping heater is guaranteed for one year from date of purchase against mechanical defect. Sears cannot be responsible for damage to wick or head due to use of improper or contaminated fuel.

SEARS, ROEBUCK AND CO.
Chicago, Illinois 60607

Model No. 476.72305

